

COASTER
Fine Furniture

103621

DINING TABLE

ASSEMBLY INSTRUCTION
COASTER FINE FURNITURE



www.coastercompany.com

Assembly Instruction

ASSEMBLY TIPS:

 
 




1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



Warning !

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.

PARTS IDENTIFICATION

A		TABLE TOP	1PC	B		LEG	4PCS
Z	HARDWARE PACKAGE						
1	BOLT (Ø5/16"×2-1/2")		8PCS	3	FLAT WASHER (black)		8PCS
2	LOCK WASHER		8PCS	4	ALLEN WRENCH (6MM)		1PC

STEP 1

Attach 4 legs(B)to the top with bolt(1)through lock washer(2)and flat washer(3)by using allen wrench(4)

