



107871

DINING TABLE

ASSEMBLY INSTRUCTION

COASTER FINE FURNITURE



www.coastercompany.com

2017-4-20

Assembly Instruction

Assembly Tips:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



Warning!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately
2. This products is for home use only and not intended for commercial establishment



ASSEMBLY TIME PER UNIT: 20MINUTES

PARTS IDENTIFICATION

Z HARDWARE PACKAGE

B1:top glass

A TOP GLASS



1pc

B2:FRAME +PEDESTAL

B TOP FRAME



1PC

C LEG



2pcs

 
D CROSSBAR



1pc

B3:BASE

E BASE



2PCS

NO.	DESCRIPTION	FIGURE	QTY
1	Flat Washer D20*2		18PCS
2	M8*70		8PCS
3	Allen Wrench 8mm		1PCS
4	M8*40		8PCS
5	Glass Rest		8PCS
6	Ø8*10		8PCS
7	M8*140		2PCS

Hardware pack is located in 107871 B2

