

COASTER[®]
Fine Furniture

121572

DINING CHAIR

ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE



www.coastercompany.com

ASSEMBLY INSTRUCTION

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.




Warning!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.


PARTS IDENTIFICATION:

A CHAIR FRAME

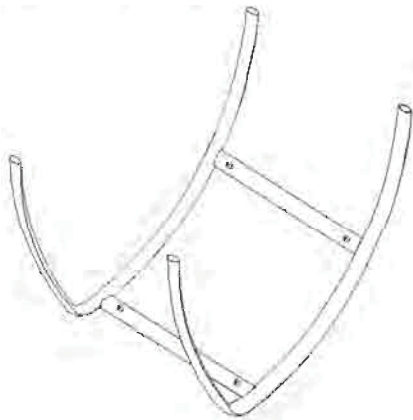




2PCS

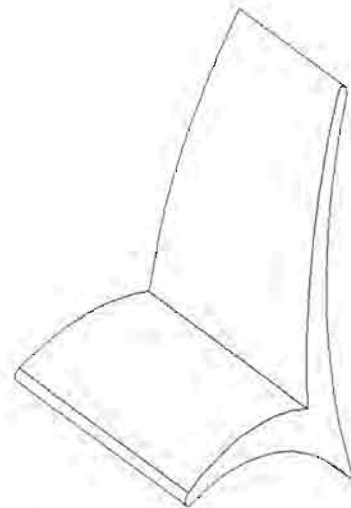B CHAIR SEAT AND BACKREST




2PCS

| Z | HARDWARE IDENTIFICATION | | |
|---|-------------------------|--|------|
| | DESCRIPTION | | QTY |
| 1 | BOLT Φ8mmx30mm |  | 8PCS |
| 2 | ALLEN WRENCH 5mm |  | 2PCS |
| 3 | WASHER Φ18mm |  | 8PCS |

NOTE: QUANTITIES SHOWN ARE FOR TWO CHAIRS


ATTENTION: IT NEED ONE PERSON AND IT WILL TAKE ABOUT FIVE MINUTES TO ASSEMBLE THE ITEM.

STEP 1

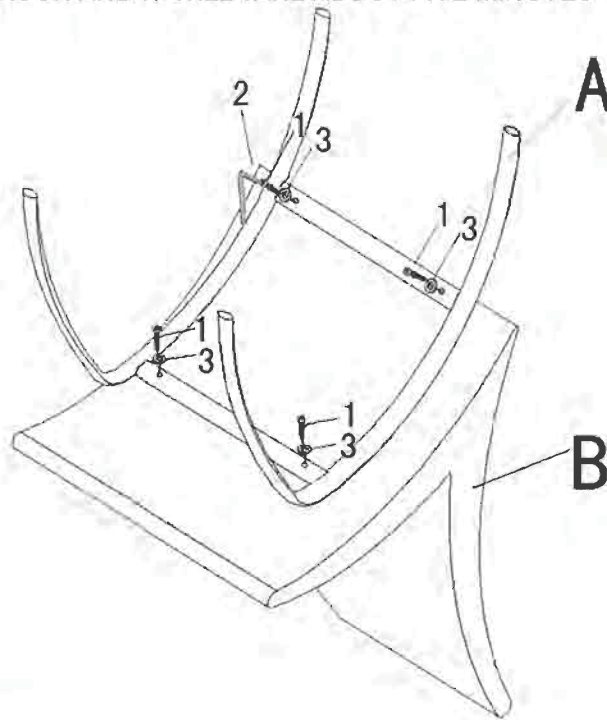

TAKE CHAIR FRAME (A) TO CHAIR BACKREST (B) LIKE THE FIGURE.
FASTEN BOLT (1) AND WASHER (3) BY ALLEN WRENCH (2).

STEP 2

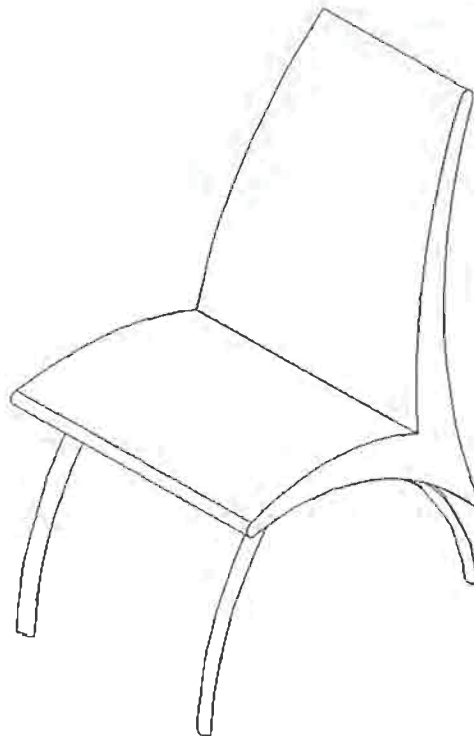

CHECK STABILITY OF THE CHAIR AND OVERTURN IT.