

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE




ASSEMBLY TIPS :

- 1. Remove hardware from box and sort by size
- 2. Please check to see that all hardware and parts are present prior to start of assembly
- 3. Please follow attached instruction in the same sequence as numbered to assure fast and easy assembly.




WARNING !

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately
- 2. This product is for home use only and not intended for commercial establishment.

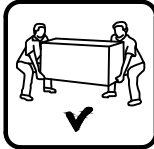

ASSEMBLY TIME	20 MINUTES
---------------	------------

PARTS IDENTIFICATION

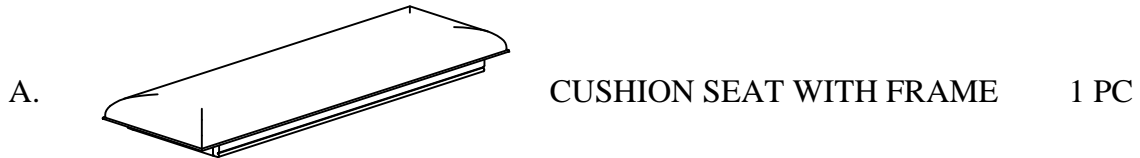

ASSEMBLY TIPS :


 
 
 



1. Remove hardware from box and sort by size
2. Please check to see that all hardware and parts are present prior to start of assembly
3. Please follow attached instruction in the same sequence as numbered to assure fast and easy assembly.




WARNING !

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately
2. This product is for home use only and not intended for commercial establishment.

 HARDWARE IDENTIFICATION

1.		THREADED BOLT	2 PCS
2.		HEX NUT	2 PCS
3.		BIG WRENCH	1 PC
4.		HEX BOLT	4 PCS
5.		LOCK WASHER	4 PCS
6.		FLAT WASHER	4 PCS
7.		SMALL WRENCH	1 PC

STEP 1

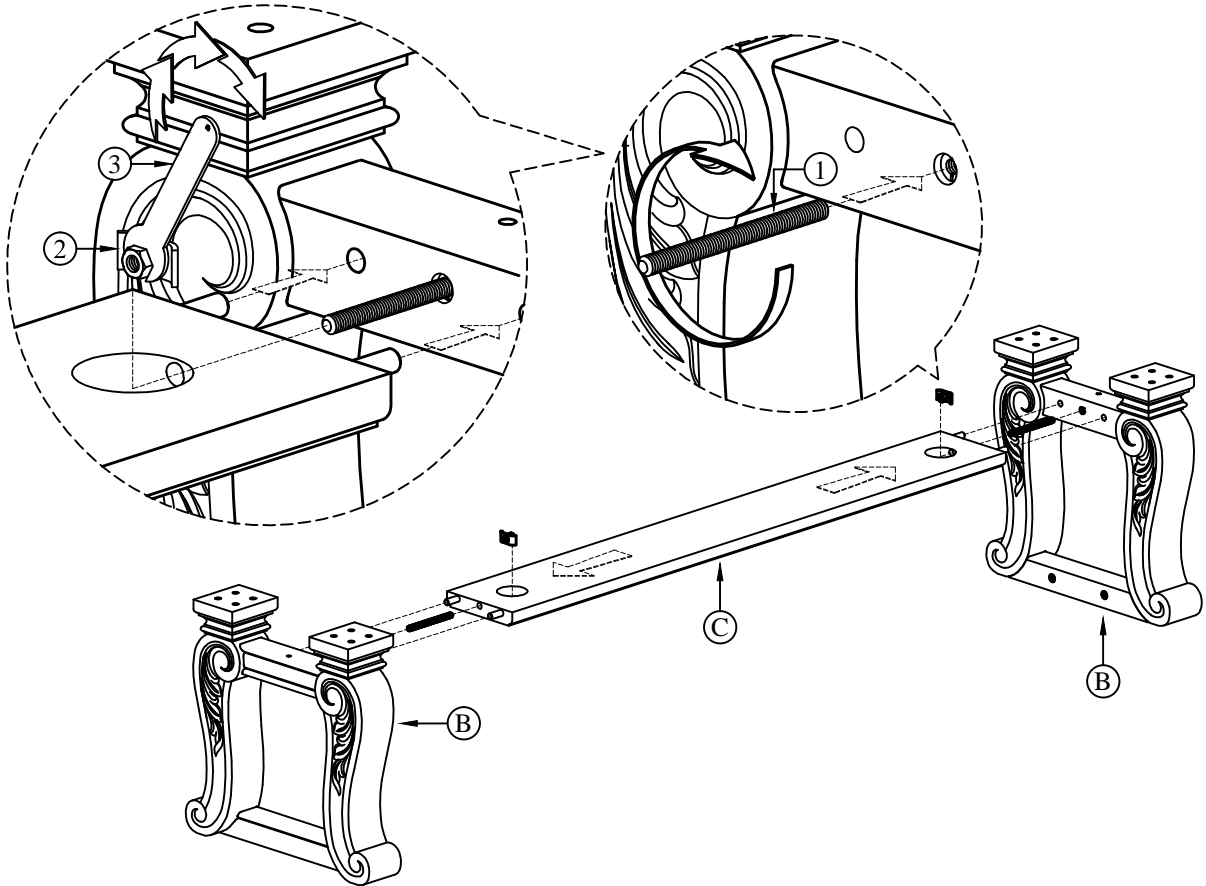

STEP 2

