


COASTER
Fine Furniture

501006

BENCH

**ASSEMBLY INSTRUCTION
COASTER FINE FURNITURE**

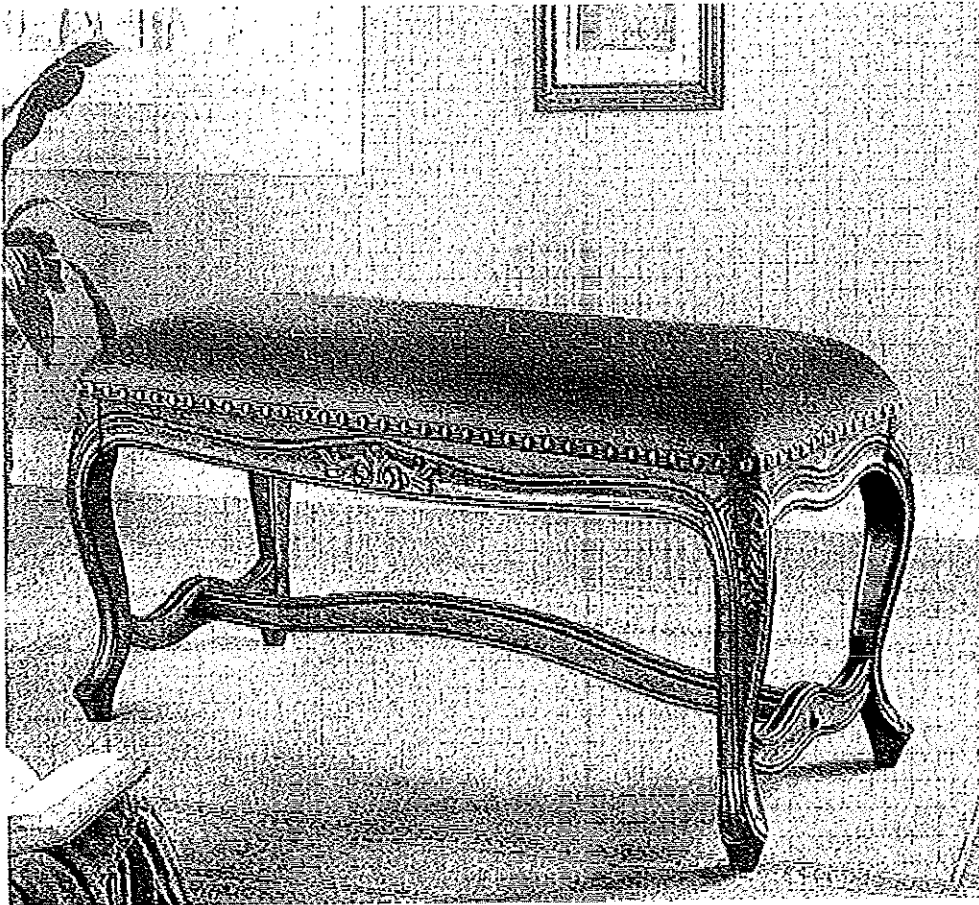

www.coastercompany.com

ASSEMBLY INSTRUCTION




 
ASSEMBLY TIPS:

- 1、 Remove hardware from box and sort by size.
- 2、 Please check to see that all hardware and parts are present prior to start of assembly.
- 3、 Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.









※Warning!

- 1、 Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2、 This product is for home use only and not intended for commercial establishment.

PARTS IDENTIFICATION

(A)	SEAT CUSHION		1PCS
(B)	LEGS		4PCS
(C)	BASE LOWER RAIL		2PCS
(D)	BASE CENTER RAIL		1PCS


HARDWARE IDENTIFICATION

Z	HARDWARE IDENTIFICATION		
1	WOOD PLUG		2PCS
2	WOOD SCREW		4PCS
3	WOOD DOWEL		6PCS
4	ALLEN BOLT-LARGE(5/16" × 2 1/2")		8PCS
5	ALLEN BOLT-SMALL(5/16" × 1 3/4")		2PCS
6	LOCK WASHER		10PCS
7	FLAT WASHER		8PCS
8	ALLEN WRENCH		1PCS

ITEM : 501006


ASSEMBLY INSTRUCTION

1.)

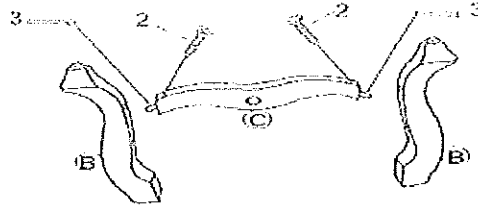


Place the Wood Dowels(3) in the Base Lower Rail (C) and place the legs (B) on both sides of the Base Lower Rail (C). Secure in place with wood screws(2).

2.)

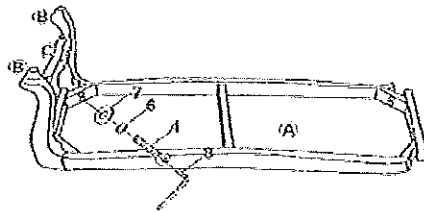


Secure the back corners of the seat box into place using Allen Bolt(4), lock washer and flat washer. Then hand tighten bolt.

3.)

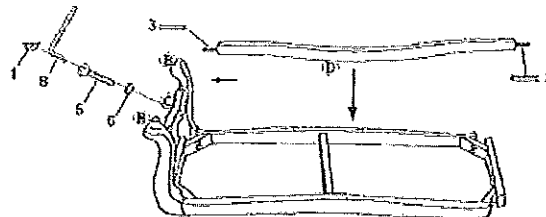

Put the Wood Dowels(3) in the Base Center Rail(D). Using the Allen Bolt(5), lock washer and flat washer, hand tighten bolt into Base Lower Rail(C).

4.)

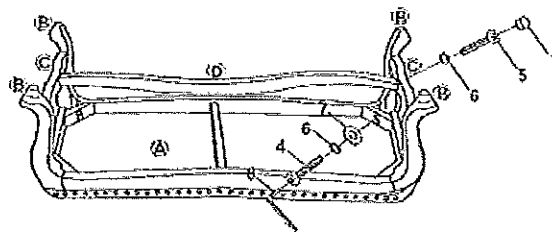

Place the remaining Legs(B) and Base Lower Rail(C) on the other side. Secure Legs(B) to seat box by hand tightening Allen Bolt(4), lock washer and flat washer.

5.)

