

CONSOLE

ASSEMBLY INSTRUCTION COASTER FINE FURNITURE



www.coastercompany.com

ITEM: 950048

ASSEMBLY INSTRUCTION

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



Warning!!


- 1. Don't attempt to repair or modify parts that are broken or defective .Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishment.

PARTS IDENTIFICATION (A) BACK PANEL 1 PC (B) SHELF 1 PC (C) LEFT LEG 1 PC (D) RIGHT LEG 1 PC (E) BASE BOARD 1 PC (F) TOP 1 PC

Z	HARDWARE PACKAGE		
NO	DESCRIPTION	FIGURE	Q'TY
1	MEDIUM SCREW ∅4×40mm	(%)DDDDD>	2 pcs
2	DOWEL ∅8×25mm		2 pcs
3	FLAT HEAD SCREW ∅6×25mm		3 pcs
4	EXTRA LARGE SCREW ∅6×50mm		4 pcs
5	HAMMER NUT ∅10×15mm	T 2	2 pcs
6	HAMMER SCREW ∅6×65mm	0	2 pcs
7	WOOD SCREW ∅7×58mm		2 pcs
8	PIN ∅8mm		2 pcs
9	ALLEN WRENCH M4mm		1 pc
10	STICKER ∅13mm		2 pcs
11	ANTI-TIP HARDWARE		1 pc
12	SMALL SCREW ∅4×25mm	(g))))))>	1 рс
13	LARGE SCREW ∅5×40mm		1 pc
14	PLASTIC PLUG ∅8×40mm		1 pc
15	GLUE 10g		1 pc




ITEM: 950048 ASSEMBLY INSTRUCTION

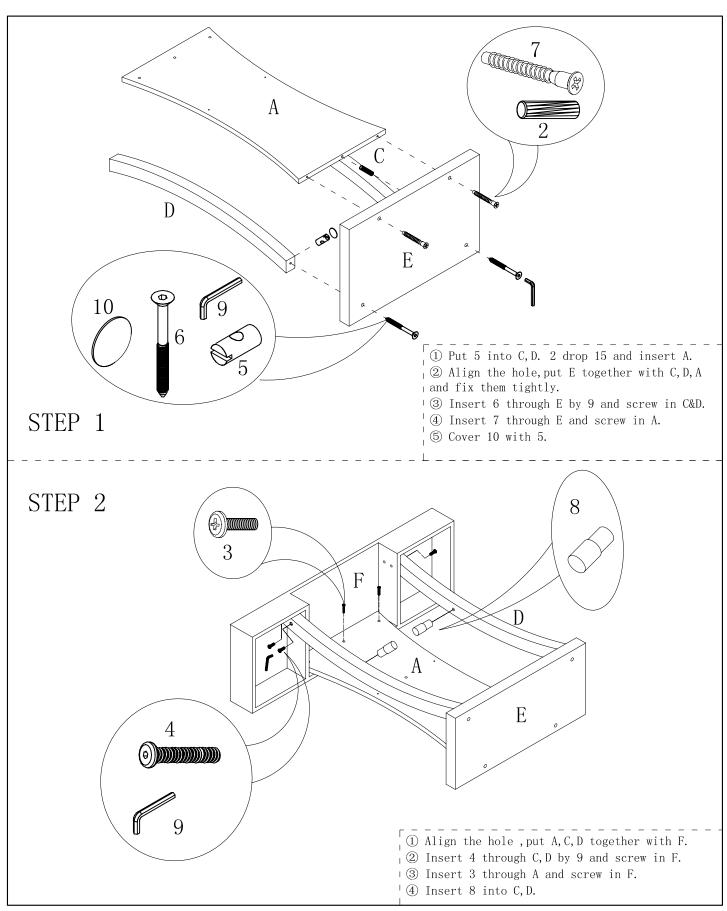

COASTER ®

ITEM: 950048 ASSEMBLY INSTRUCTION

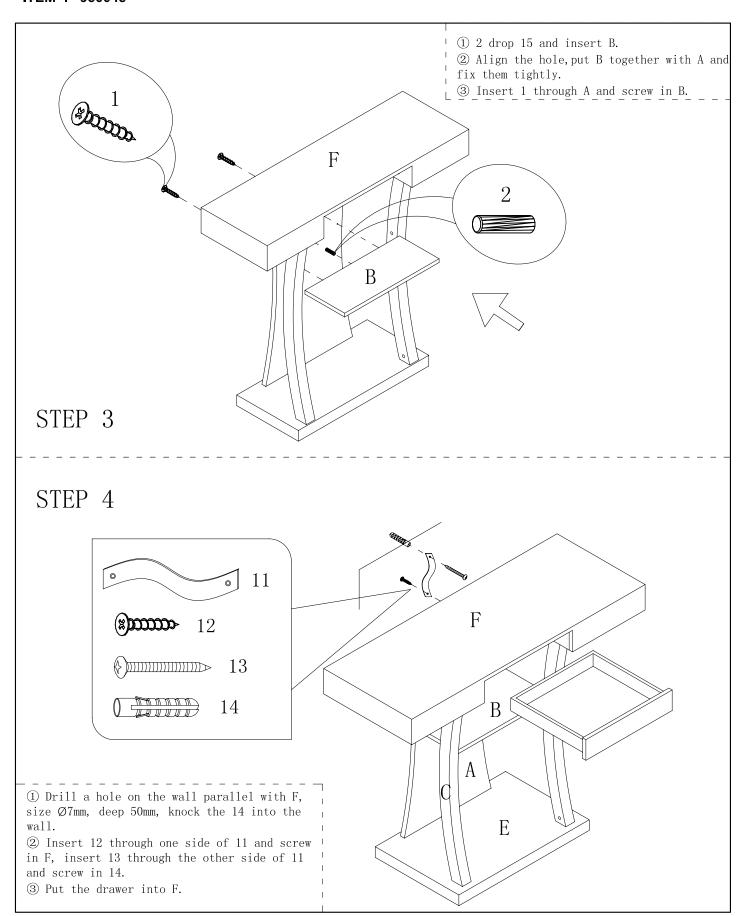



www.coastercompany.com