

COASTER[®]
Fine Furniture

950156

CONSOLE TABLE

ASSEMBLY INSTRUCTION
COASTER FINE FURNITURE



www.coastercompany.com

Assembly Instruction

ASSEMBLY TIPS:










1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.




Warning !

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.

PARTS IDENTIFICATION

A	TOP PANEL		1PC	C	LEFT LEG		2PCS
B	BOTTOM PANEL		1PC	D	RIGHT LEG		2PCS
Z	HARDWARE PACKAGE						
1	BOLT		16PCS	4	SCREW		8PCS
2	LARGE L METAL		4PCS	5	ALLEN WRENCH		1PC
3	SMALL L METAL		4PCS				


STEP 1

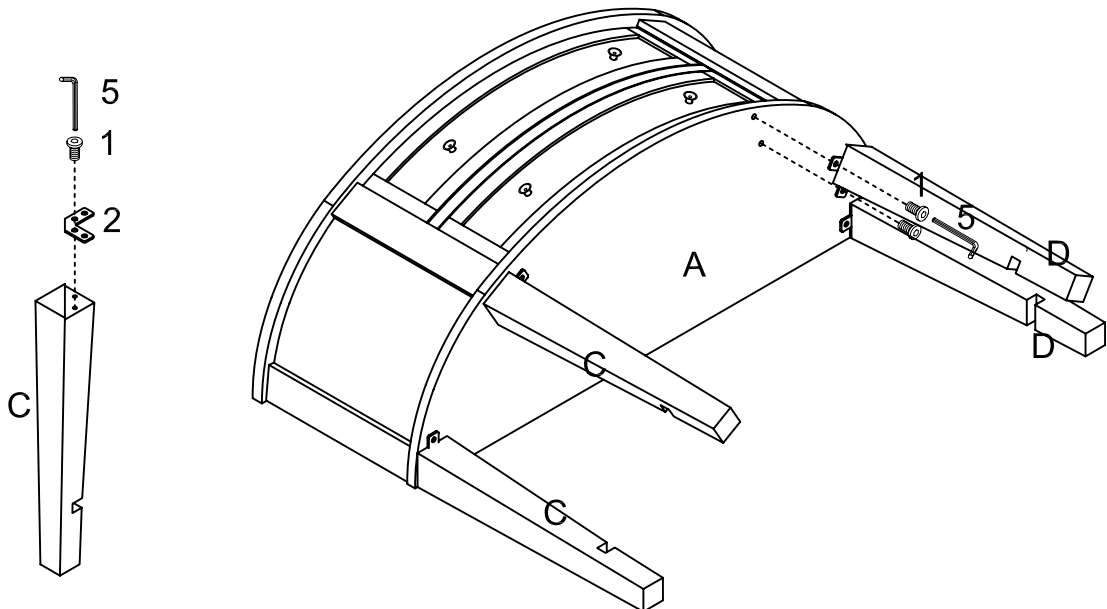

Insert 2 bolts through the metal bracket. Tighten with Allen wrench(5).
 Assemble the legs (C&D) to the top panel (A) with bolts (1). Tighten with allen wrench (5).


STEP 2

Insert the bottom panel(B)to the legs as shown.

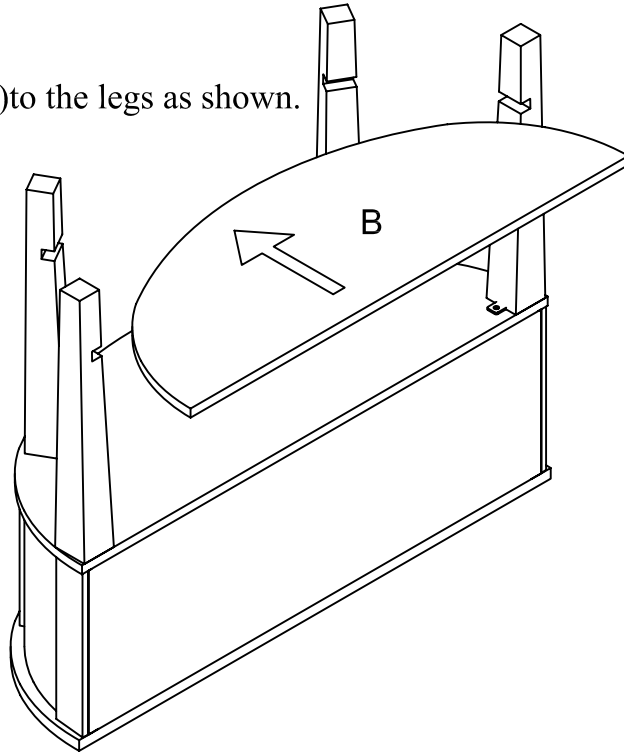

STEP 3

Attach the small L metal(3)to the legs and top panel with screw(4). Tighten with screw driver (not included).

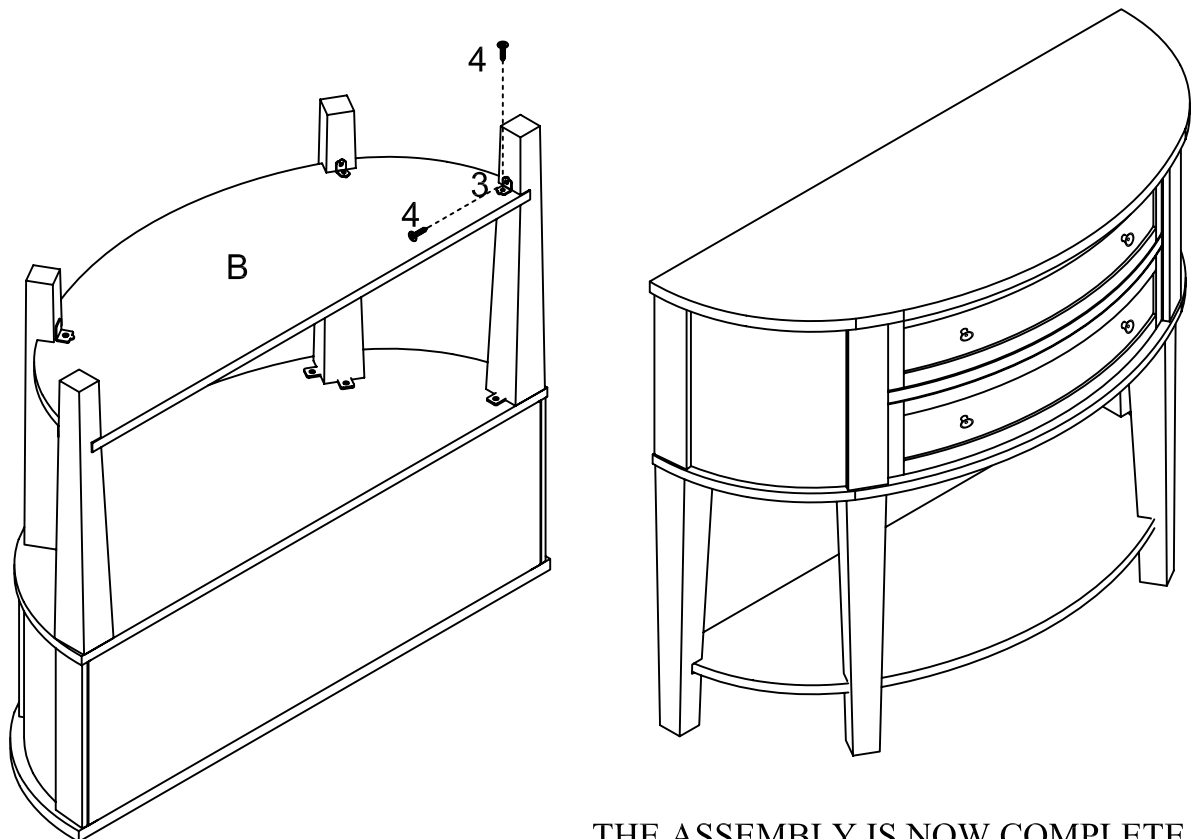

THE ASSEMBLY IS NOW COMPLETE.