



802141

WRITING DESK

ASSEMBLY INSTRUCTION
COASTER FINE FURNITURE



www.coastercompany.com

Assembly Instruction


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.







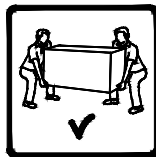


Warning !





 

  



1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.



ASSEMBLY TIME PER UNIT:	30 MINUTES
-------------------------	------------

 
PARTS IDENTIFICATION

(A) GLASS		1PC	(E) BOTTOM FRAME		1PC
(B) SHELF FRAME		1PC	(F) RIGHT LEG		1PC
(C) TOP BOX		1PC	(G) LEFT LEG		1PC
(D) CROSSBAR		2PCS			


Z	HARDWARE PACKAGE		
NO	DESCRIPTION	FIGURE	QTY
1	ALLEN WRENCH Ø1/4"*57MM		1PC
2	BOLT M6"*8MM		2PCS
3	BOLT M6"*15MM		4PCS
4	BOLT M6"*20MM		3PCS
5	BOLT M6"*25MM		2PCS
6	BOLT M6"*32MM		10PCS
7	FLAT WASHER Ø16MM		18PCS
8	FLAT HEAD SCREW M4*15MM		2PCS
9	HANDLE TOP		2PCS
10	HANDLE RING		2PCS

STEP 1


Don't tighten all bolts on this step

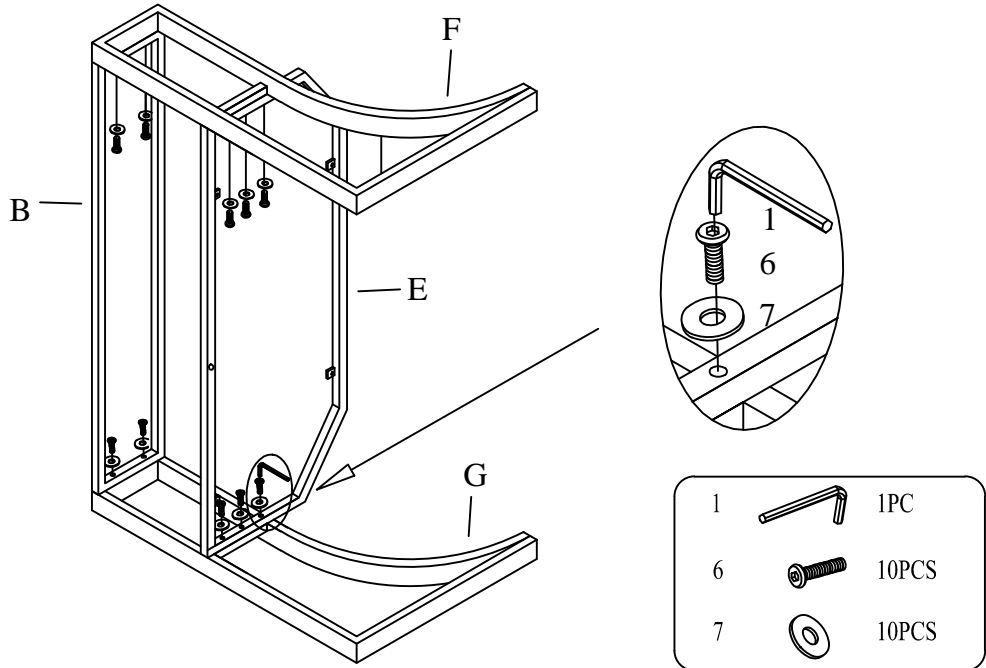

STEP 2

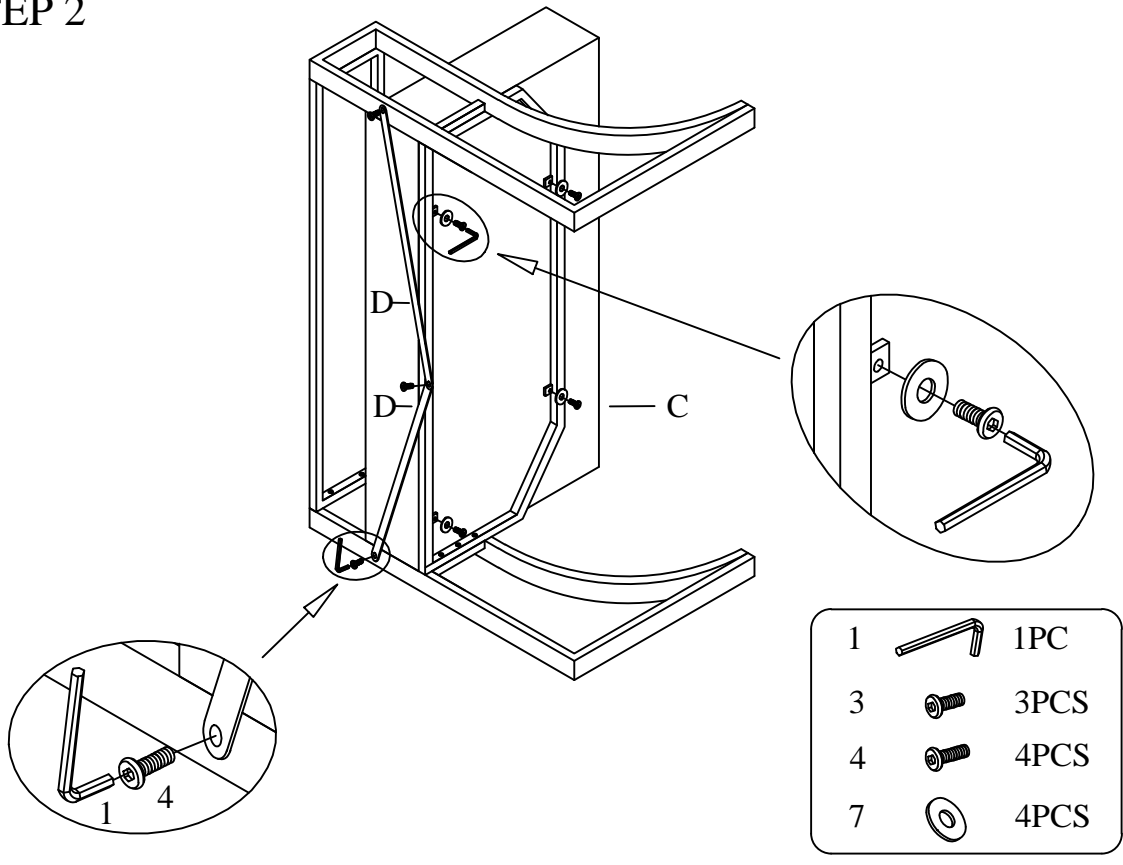

STEP 3

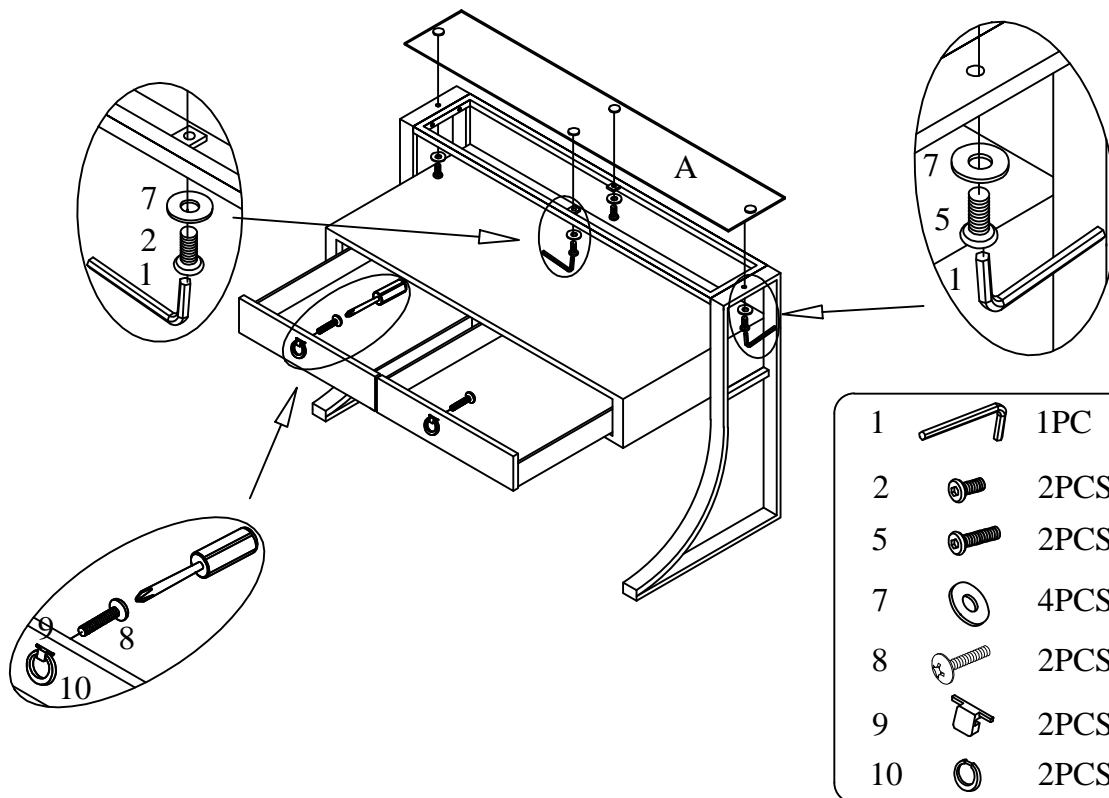

STEP 4

Tighten all screws on this step

