



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

915429
OTTOMAN

ITEM : 915429



ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishment.

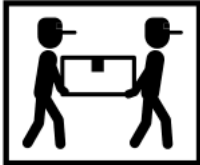


ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

A


OTTOMAN

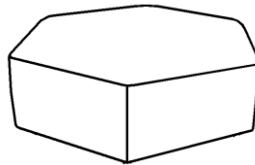

1PC

B

LEG

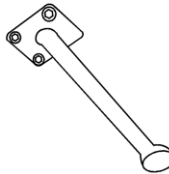

6PCS

HARDWARE IDENTIFICATION

1

Allen wrench
5*23*73mm



1 PC

2

Wood screw
30*10*10mm





18 PCS


ITEM : 915429

ASSEMBLY INSTRUCTIONS

STEP 1

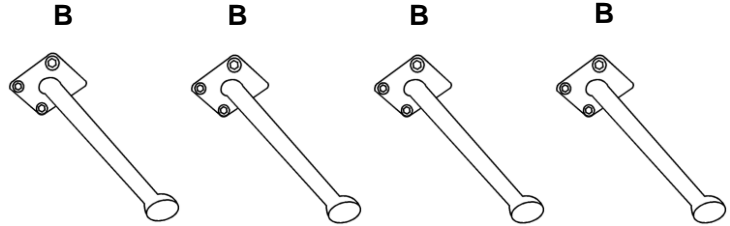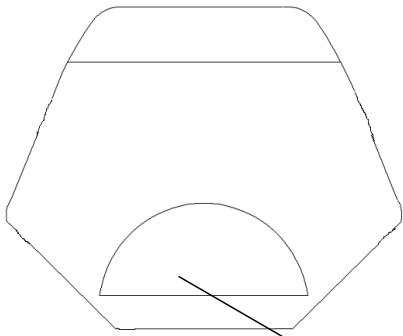

STEP 2

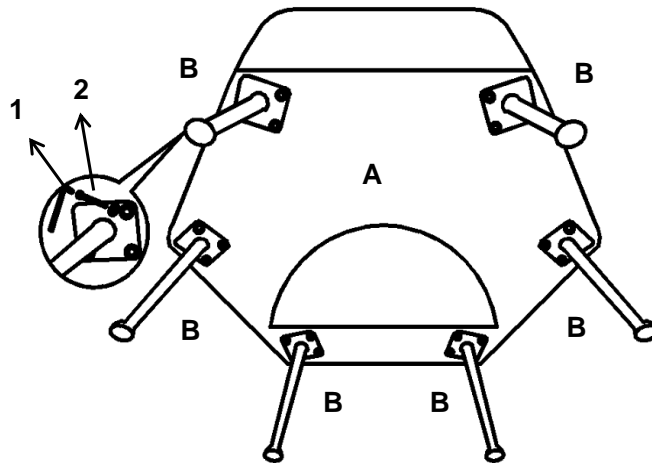

STEP 4

