

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

601742P
POWER MOTION LOVESEAT
WITH CONSOLE

REVISION 1:08/21/2018 REVISION 2:07/15/2019

COASTERFURNITURE.COM

PAGE 1 OF 4

ITEM: 601742P

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!


- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME PER UNIT 20 MINUTES

PARTS IDENTIFICATION

<u>PARTS IDENTIFICATION</u>			
A		BASE	1 PC
В		LEFT BACK	1 PC
С		MIDDLE BACK	1 PC
D		RIGHT BACK	1 PC
E		POWER CABLE	1 PC
		PAGE 2 OF 4	COASTERFURNITURE.COM

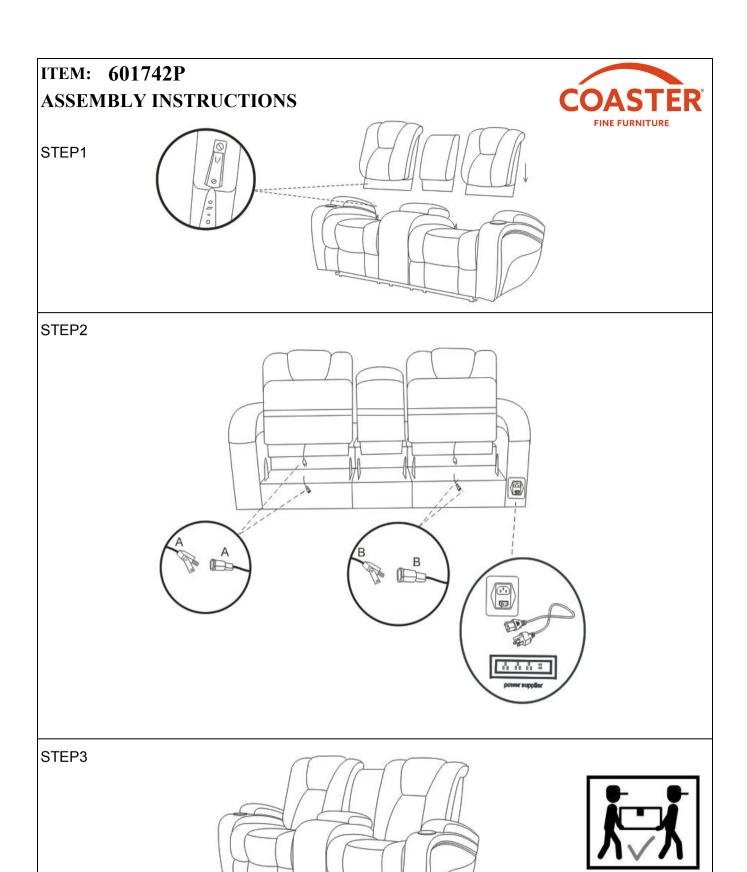

PAGE 3 OF 4


COASTERFURNITURE.COM

ITEM: 601742P


ASSEMBLY INSTRUCTIONS



SHOW1

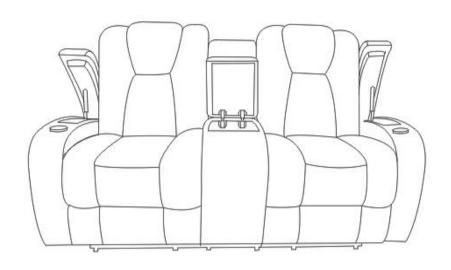

SHOW2

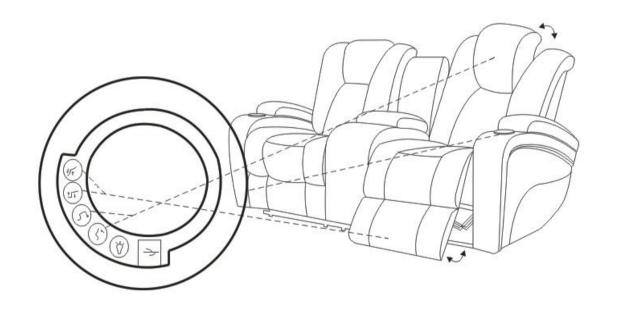

PAGE 4 OF 4

COASTERFURNITURE.COM